


# RIGHT

PUSH BUTTON  
(PUSH OFF)

TURN-R

START

OFF-RUN

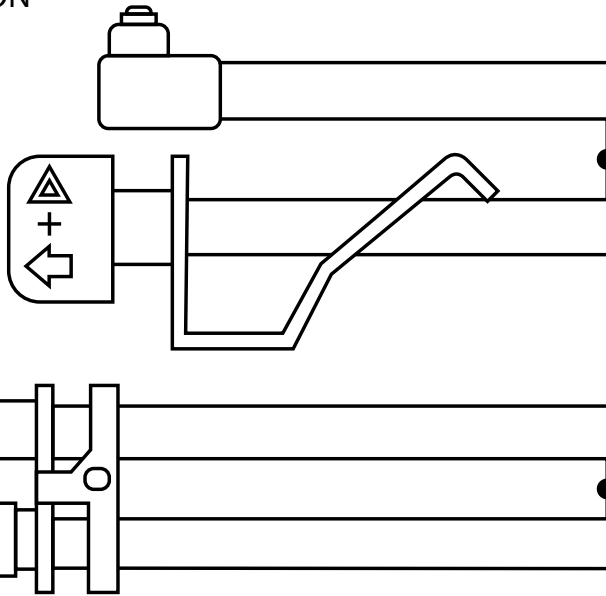

Red / Yellow (PUSH BUTTON)

Orange / White (POWER)

White / Brown (TURN-R)

Black / Red (START)

White / Black (POWER)


Gray (OFF-RUN)

# LEFT

TURN-L

HORN

HI-LO

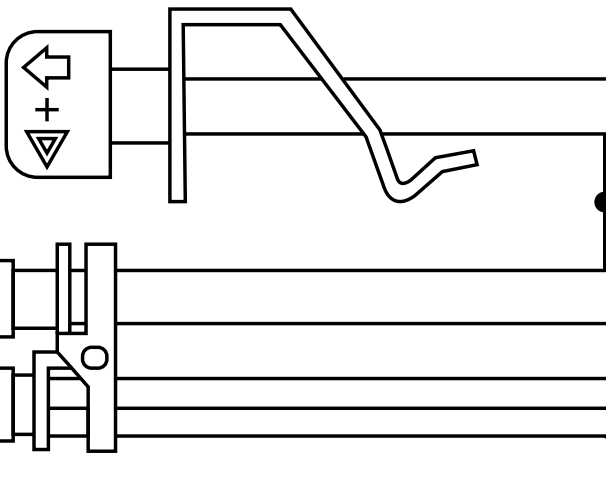

White / Purple (TURN-L)

Orange / White (POWER)

Yellow / Black (HORN)

White (HI)

Blue (POWER)

Yellow (LO)

