



Elite 1000/1500 Plug 'n' Play Adaptor Harness HT-140872

Supported Models

MAZDA MX-5 / MIATA (NA) 1.6L (All Regions, Excluding 96-97 OBD-II USDM)
MAZDA MX-5 / MIATA (NA) 1.8L (All Regions, Excluding 96-97 OBD-II USDM)

Package Contents

THIS MAZDA MX-5 (NA) 1.6/1.8L PACKAGE CONTAINS THE FOLLOWING:

- MAZDA MX-5 (NA) 1.6/1.8L ELITE 1000/1500 PLUG 'N' PLAY ADAPTOR (HT-140872)
- ELITE SERIES PLUG 'N' PLAY ADAPTOR HARNESS (HT-130201)
- HALTECH AIR TEMPERATURE SENSOR (HT-010200)



Application Notes

THIS MAZDA MX-5 (NA) 1.6/1.8L ELITE 1000 PLUG 'N' PLAY ADAPTOR HARNESS IS SUITABLE FOR USE WITH A HALTECH ELITE 1000/1500/2000 AND 2500 ECU.

ENSURE THAT THE CORRECT BASEMAP IS LOADED BEFORE STARTING THE VEHICLE.

THE BASEMAP IS ONLY FOR USE AS A STARTING POINT AND THE ECU WILL REQUIRE APPROPRIATE TUNING.

HALTECH WILL NOT BE HELD RESPONSIBLE FOR ENGINE DAMAGE DUE TO THE IMPROPER USE OF BASEMAPS.

THE 16 PIN AUXILIARY CONNECTOR PROVIDES A NUMBER OF ADDITIONAL INPUT/OUTPUT LINKS TO THE HALTECH ELITE ECU. THIS KIT IS SUPPLIED WITH SPARE PINS FOR USE WITH THE 16 PIN AUXILIARY CONNECTOR.

AN APPROPRIATE CRIMPING TOOL IS RECOMMENDED TO USE THE 16 PIN AUXILIARY CONNECTOR.

A CRIMPING TOOL KIT (PART # HT-070300) CAN BE PURCHASED AT WWW.HALTECH.COM

AFTER THE INSTALLATION OF THIS PLUG 'N' PLAY KIT, FACTORY PANELS MAY BE RE-INSTALLED.

Elite Basemaps

MAKE	MODEL	CODE	ENGINE	BASEMAP
MAZDA	MX-5 / MIATA 1.6L	NA	B6ZE(RS)	HT-140872 - Mazda MX5 NA 1.6.e1000
MAZDA	MX-5 / MIATA 1.6L	NA	B6ZE(RS)	HT-140872 - Mazda MX5 NA 1.6.e1500
MAZDA	MX-5 / MIATA 1.6L	NA	B6ZE(RS)	HT-140872 - Mazda MX5 NA 1.6.e2000
MAZDA	MX-5 / MIATA 1.6L	NA	B6ZE(RS)	HT-140872 - Mazda MX5 NA 1.6.e2500
MAZDA	MX-5 / MIATA 1.8L	NA	BP	HT-140872 - Mazda MX5 NA 1.8.e1000
MAZDA	MX-5 / MIATA 1.8L	NA	BP	HT-140872 - Mazda MX5 NA 1.8.e1500
MAZDA	MX-5 / MIATA 1.8L	NA	BP	HT-140872 - Mazda MX5 NA 1.8.e2000
MAZDA	MX-5 / MIATA 1.8L	NA	BP	HT-140872 - Mazda MX5 NA 1.8.e2500

Jumper ID Settings

Jumper	Connection
1.6L	Connects Thermofan Relay to Digital Pulsed Output 4
1.8L	Connects Thermofan Relay to Digital Pulsed Output 4

THIS MAZDA MX-5 (NA) 1.6/1.8L PLUG 'N' PLAY ADAPTOR HARNESS IS CAPABLE OF BEING CONFIGURED FOR USE WITH MULTIPLE VEHICLES.

INSIDE THE ADAPTOR BOX THERE IS 1 HEADER WITH WHITE LABELS NEXT TO IT.

THESE LABELS ARE **1.8L AND 1.6L**

THESE MUST BE CHANGED TO USE THIS PRODUCT WITH OTHER COMPATIBLE VEHICLES.

THE JUMPER SETTINGS ARE SHOWN BELOW WITH VARIOUS CONFIGURATIONS.

THIS PLUG 'N' PLAY ADAPTOR IS FACTORY CONFIGURED TO SUIT THE MAZDA MX-5 (NA) 1.8L ELITE 1000 APPLICATION.

UNSCREW THE FRONT PLATE AND SLIDE OUT THE PCB TO ACCESS JUMPERS.

DEFAULT CONFIGURATION

MAZDA MX-5 (NA) 1.8L

 
 ID JUMPER



ALTERNATE CONFIGURATION

MAZDA MX-5 (NA) 1.6L

 ID JUMPER



ECU Location - 1.6L & 1.8L (Exc. USDM)

THE FACTORY MAZDA MX-5 1.6L (ALL REGIONS) AND 1.8L (EXCLUDING USDM) ECU IS LOCATED UNDER A PROTECTIVE PLATE ON THE PASSENGER SIDE FOOT WELL (RIGHT HAND DRIVE (RHD) MODELS). REMOVING THIS PANEL WILL ALLOW FOR THE INSTALLATION OF THIS HALTECH PLUG 'N' PLAY PRODUCT.



Figure 1 - Installation of Haltech products in vehicle



Figure 2 - Factory protective plate over Haltech products

ECU Location - 1.8L (USDM)

THE FACTORY MAZDA MX-5 1.8L (USDM) ECU IS LOCATED BEHIND THE PASSENGER SEAT (LEFT HAND DRIVE (LHD) MODELS).

1.6L Throttle Position Sensor Notes

ALL MANUAL TRANSMISSION 1.6L VARIANTS WILL REQUIRE THE FACTORY THROTTLE POSITION SENSOR TO BE UNPLUGGED AND REMOVED. A FULL RANGE THROTTLE POSITION SENSOR ALTERNATIVE MUST BE INSTALLED FOR CORRECT FUNCTIONALITY. FAILURE TO DO SO WILL RESULT IN ERRATIC BEHAVIOUR OF THE ECU AT WIDE OPEN THROTTLE ALONG WITH DAMAGE TO THE ECU.

Basemap Notes

THE BASEMAPS SUPPLIED WITH THIS PRODUCT HAVE BEEN SETUP USING THE ELITE ECU INTERNAL 3 BAR MAP SENSOR.

PLEASE CONNECT THE ELITE ECU INTERNAL MAP SENSOR TO THE INTAKE MANIFOLD PRIOR TO STARTING THE VEHICLE.



Figure 3 - Elite ECU internal MAP sensor

AFM Modification for fuel pump

IN 1.6L VARIANTS, WIRES 1 AND 6 IN THE FACTORY AIR FLOW METER CONNECTOR MUST BE LINKED IN ORDER TO ENSURE CORRECT FUEL PUMP OPERATION.

PLEASE BE ADVISED THAT THE WIRING COLOUR OF THE AIR FLOW METER (AFM) SENSOR BELOW HAS BEEN DERIVED FROM A MAZDA MX-5 1990 (AUSTRALIAN DELIVERED) AND IS SUBJECT TO CHANGE ACROSS DIFFERENT VARIANTS.

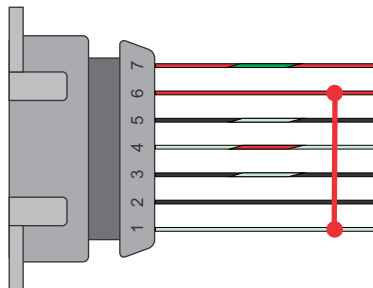


Figure 4 - AFM Connector wiring

Air Temperature Sensor

An air temperature sensor is a required sensor used in Volumetric Efficiency (VE) tuning to compensate for changes in air density due to air temperature. Cold air has a higher density than warm air and therefore requires a greater volume of fuel to maintain the same air/fuel ratio.

The Haltech ECU can automatically compensate the fuel delivery for changes in air density based on temperature using the signal received from the air temperature sensor.

On many vehicles the OEM air temperature sensor is located either within the mass airflow sensor or molded into the intake air manifold, however in performance applications the airflow sensor and air intake piping are often modified, removed or replaced. For this reason an air temperature sensor (HT-010200) is provided for use as a substitute to the factory air temperature sensor.


This sensor should be mounted to provide the best representation of the actual temperature of the air entering the combustion chamber, i.e. after any turbocharger, supercharger and intercooler.

The sensor needs to be in the moving air stream to give fast response times and reduce heat soak effects. Be aware in some situations, mounting the sensor into the inlet manifold (especially at the rear) may cause heat soak problems (where the sensor reads the temperature of the manifold itself rather than the air that is moving through the manifold into the engine).

Once a suitable position has been located for the air temperature sensor to be installed, a hole should be drilled and tapped to accept the sensor. The intake manifold or inlet piping should be removed from the engine before this is done to prevent any metal shavings or swarf entering the engine.

This package includes an air temperature sensor (HT-010200). This air temperature sensor should be installed by utilising an auxiliary Analogue Voltage Input (AVI) and signal ground located on the 16 pin auxiliary connector.


Please refer to the auxiliary connector pinout table and sensor wiring diagram below.

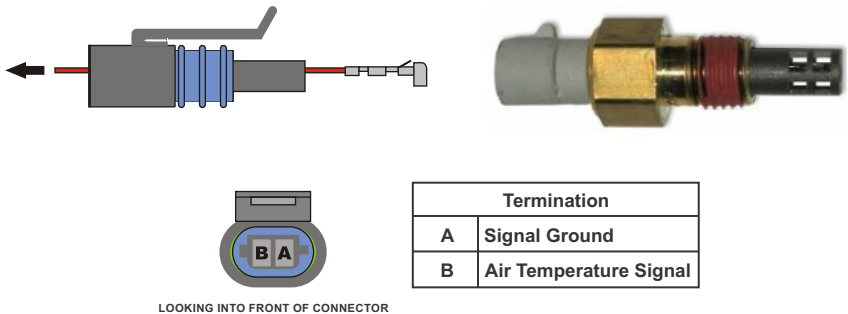

INSERT WIRE THROUGH PLUG, THEN CRIMP THE PIN INTO THE WIRE AND DRAW BACK TO LOCK

Figure 5 - Air Temperature Sensor wiring

Auxiliary Connector

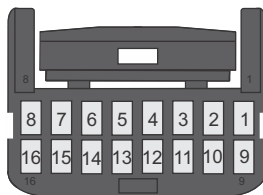


AUXILIARY CONNECTOR (16 PIN)
REAR VIEW (WIRE SIDE)

An auxiliary connector allows easy connection of additional ECU inputs and outputs.
Please see pinout information below for spare inputs and outputs available to this application.


Position (16 Pin Plug)	Connection	Function	Notes
1	From Haltech ECU (A9)	+5V	+5V DC Sensor Supply (50mA Max)
2	From Haltech ECU (A2)	AVI 4	Spare AVI
3	-	-	-
4	From Haltech ECU (B14, B15, B16)	SIGNAL GROUND	Signal Ground For Input Sensors
5	From Haltech ECU (B17)	IGN 7	Spare Output (Available to Elite 2000/2500 Only)
6	From Haltech ECU (B18)	IGN 8	Spare Output (Available to Elite 2000/2500 Only)
7	From Haltech ECU (B9)	SPI 2	Spare SPI (Optional Flex Fuel Input)
8	From Haltech ECU (A26)	+12V (INJ)	+12V DC Supply for Relays and Solenoids (500mA Max)
9	From Haltech ECU (A9)	+5V	+5V DC Sensor Supply (50mA Max)
10	-	CAN H	CAN HI (Access to CAN BUS)
11	-	CAN L	CAN LO (Access to CAN BUS)
12	From Haltech ECU (B14, B15, B16)	SIGNAL GROUND	Signal Ground For Input Sensors
13	From Haltech ECU (A29)	INJ 7	Spare Output (Available to Elite 2000/2500 Only)
14	From Haltech ECU (A30)	INJ 8	Spare Output (Available to Elite 2000/2500 Only)
15	-	-	-
16	From Haltech ECU (A26)	+12V (INJ)	+12V DC Supply for Relays and Solenoids (500mA Max)

Main Connectors

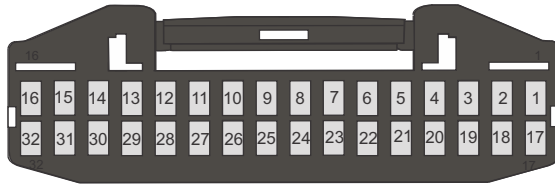

CONNECTOR (32 PIN)
REAR VIEW (WIRE SIDE)

Position (32 Pin Plug)	ECU Connector (34 Pin Plug)	Function	Description
1	A1	DPO 2	A/C Control
2	A2	AVI 4	Spare Analogue Voltage Input
3	A3	IGN 1	Igniton Coils 1 & 4
4	A4	IGN 2	Ignition Coils 2 & 3
5	A5	IGN 3	Spare Output
6	A6	IGN 4	Spare Output
7	A7	IGN 5	Purge Control Solenoid (EVAP) (Available to Elite 2000/2500 Only)
8	A8	IGN 6	Spare Output (Available to Elite 2000/2500 Only)
9	A9	+5V	+5V DC Sensor Supply
10	A10	BATTERY GROUND	Battery Negative
11	A11	BATTERY GROUND	Battery Negative
12	A12	+8V	Not used
13	A13	IGNITION INPUT	Not Used
14	A14	AVI 10	Throttle Position Sensor
15	A15	AVI 9	A/C Request
16	A16	AVI 2	Spare Analogue Voltage Input
17	A17	AVI 3	Spare Analogue Voltage Input
18	A18	DPO 1	Tachometer
19	A19	INJ 1	Injector #1
20	A20	INJ 2	Injector #2
21	A21	INJ 3	Injector #3
22	A22	INJ 4	Injector #4
23	A23	DPO 3	Idle Control Motor (BAC)
24	A24	DPO 5	Fuel Pump Relay
25	A25	DPO 6	Not Used
26	A26	+12V (INJ)	Fused Power
27	A27	INJ 5	Spare Output (Available to Elite 2000/2500 Only)
28	A28	INJ 6	Spare Output (Available to Elite 2000/2500 Only)
29	A31	STEP1 P1	Spare Output
30	A32	STEP1 P2	Spare Output
31	A33	STEP1 P3	Spare Output
32	A34	STEP1 P4	Spare Output

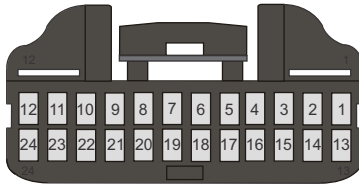

CONNECTOR (24 PIN)
REAR VIEW (WIRE SIDE)

Position (24 Pin Plug)	ECU Connector (34 Pin Plug)	Function	Description
1	B1	TRIGGER	Crankshaft Position Sensor (2 pulse)
2	B2	HOME	Crankshaft Position Sensor (4 pulse)
3	B3	AVI 7	Air Temperature Sensor
4	B4	AVI 8	Coolant Temperature Sensor
5	B5	TRIGGER -	Not Used
6	B6	HOME -	Not Used
7	B7	SPI 4	Spare Synchronised Pulsed Input
8	B8	SPI 1	Vehicle Speed Sensor
9	B9	SPI 2	Spare Input (Optional Flex Fuel Input)
10	B10	SPI 3	Spare Synchronised Pulsed Input
11	B11	+12V (ECU)	Fused Power
12	B12	AVI 6	Spare Analogue Voltage Input
13	B13	AVI 1	Narrowband O2 Sensor
14	B14	SIGNAL GROUND	Signal Ground for Input Sensors
15	B15	SIGNAL GROUND	Signal Ground for Input Sensors
16	B16	SIGNAL GROUND	Signal Ground for Input Sensors
17	B23	CAN HIGH	Not Used
18	B24	CAN LOW	Not Used
19	B19	DPO 4	Thermofan
20	B20	AVI 5	Spare Analogue Voltage Input
21	B21	KNOCK 1	Not Used
22	B22	KNOCK 2	Not Used
23	B25	DBW 1	Spare Output (Available to Elite 1500/2500 Only)
24	B26	DBW 2	Spare Output (Available to Elite 1500/2500 Only)

Haltech

WARNING - HALTECH OFF-ROAD USAGE POLICY

It is unlawful to tamper with your vehicle's emissions equipment.

Haltech products are designed and sold for sanctioned off-road/competition non-emissions controlled vehicles only. Using Haltech products for street/road use on public roads is prohibited by law. It is the responsibility of the installer and/or user of this product to ensure compliance with all applicable local and federal laws and regulations. Please check with your local vehicle authority before using any Haltech product.

INSTALLATION OF HALTECH PRODUCTS

No responsibility whatsoever is accepted by Haltech for the fitment of Haltech Products. The onus is clearly on the installer to ensure that both their knowledge and the parts selected are correct for that particular application. Any damage to parts or consequential damage or costs resulting from the incorrect installation of Haltech products are totally the responsibility of the installer.

Always disconnect the battery when doing electrical work on your vehicle. Avoid sparks, open flames or use of electrical devices near flammable substances. Do not run the engine with a battery charger connected as this could damage the ECU and other electrical equipment. Do not overcharge the battery or reverse the polarity of the battery or any charging unit. Disconnect the Haltech ECU from the electrical system whenever doing any welding on the vehicle by unplugging the wiring harness connector from the ECU. After completing the ECU installation, make sure there is no wiring left uninsulated. Uninsulated wiring can cause sparks, short circuits and in some cases fire. Before attempting to run the engine ensure there are no leaks in the fuel system. All fuel system components and wiring should be mounted away from heat sources, shielded if necessary and well ventilated. Always ensure that you follow workshop safety procedures. If you're working underneath a jacked-up car, always use safety stands!

HALTECH LIMITED WARRANTY

Unless specified otherwise, Haltech warrants its products to be free from defects in material or workmanship for a period of 12 months from the date of purchase. Proof of purchase in the form of a copy of the original purchase invoice, receipt or bill of sale which indicates that the product is within the warranty period, must be presented to obtain warranty service. If the Haltech product is found to be defective as mentioned above, it will be replaced or repaired if returned prepaid along with proof of purchase. This shall constitute the sole liability of Haltech. To the extent permitted by law, the foregoing is exclusive and in lieu of all other warranties or representations, either expressed or implied, including any implied warranty of merchantability or fitness. In no event shall Haltech, be liable for special or consequential damages.

PRODUCT RETURNS

Please include a copy of the original purchase invoice, receipt or bill of sale along with the unused, undamaged product and its original packaging. Any product returned with missing accessory items or packaging will incur extra charges to return the item to a re-saleable condition. All product returns must be sent via a freight method with adequate tracking, insurance and proof of delivery services. Haltech will not be held responsible for product returns lost during transit. The sale of any sensor or accessory that is supplied in sealed packaging is strictly non-refundable if the sealed packaging has been opened or tampered with. This will be clearly noted on the product packaging. If you do not accept these terms please return the sensor in its original unopened packaging within 30 days for a full refund.

Returning a sensor or accessory product within 30 days of purchase: Product may be returned for credit or full refund. (Any sealed packaging must not have been opened or tampered with)

Returning a sensor or accessory product after 30 days of purchase: Product may be returned for credit only (no refunds given) and is subject to a 10% Restocking fee. (Any sealed packaging must not have been opened or tampered with)

V4.1

Need more help?



AUS: +61 2 9729 0999 **USA East:** (888) 298 8116 **USA West:** (949) 490 5660
Europe: +43 720 883968 **UK:** 0121 285 6650 **NZ:** 09 887 0616



www.haltech.com/support



support@haltech.com