



Installation Instructions

LS1 / LS6 Engines, p/n: PFEIC8262

LS2 / LS3 / LS7 / LS9 Engines, p/n: PFEIC8265

Important: Read the instructions in full before attempting the installation.

During installation, disconnect the battery cables. When disconnecting the battery, always remove the Negative (-) cable first and install it last.

There are several versions of LS coils, it is important to verify the correct coil for your application.

LS1 / LS6



LS2 / LS3 / LS7 / LS9



MOUNTING

The Proflow Coil is designed to be a direct replacement but due to the number of applications available, the mounting of coils may be slightly different.

1. Remove the coil covers (if supplied) from the valve covers.
2. Remove the spark plug wire from the coil.
3. Disconnect the factory connector, remove the coil retaining bolts and remove the coil.
4. Install the Proflow Coil in the same position as the original coil.
5. Connect the wiring harness and spark plug wire.