


# PROFLOW

## Magnetic Pick Up Distributor Instructions PFEID160M TO PFEID520M

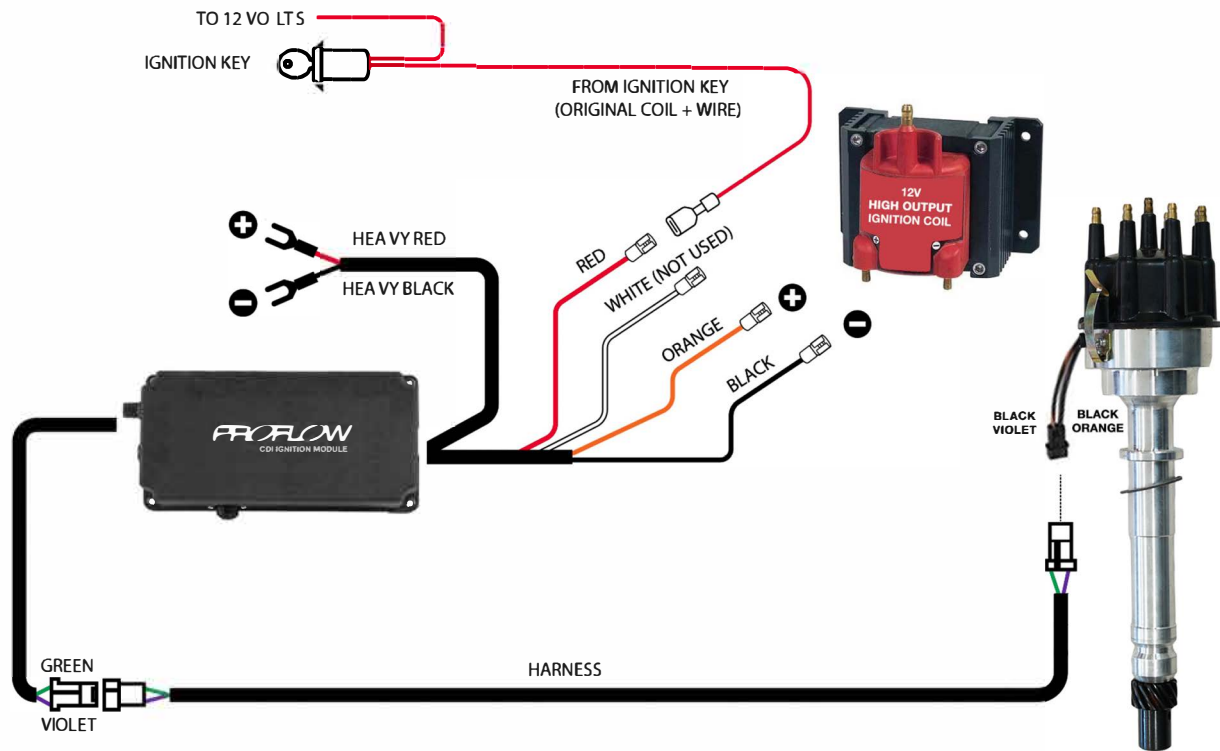

---

### Instructions

---

- Before fitting distributor, make sure the gear size and shafts look the same.
- This electronic distributor is designed to work with an external ignition box.
- Ensure the wiring colours match the connectors of the ignition box. This will ensure the phasing is correct for the distributor.

---

### Troubleshooting Tips

---

- If engine fails to start , then check the following :
- Distributor is fitted correctly and rotating in the correct direction
- Distributor body is earthed to engine block
- Electrical connectors on coil correctly and tight